

Secure Water Treatment (SWaT) Testbed



Version: 4.3

Last updated: 16 July 2020

Contact information: itrust@sutd.edu.sg

Website: <https://itrust.sutd.edu.sg/>

INTRODUCTION

Aim

This documentation provides readers with an in-depth understanding of how the Secure Water Treatment (SWaT) testbed works, the capabilities it is equipped with as a platform for **research and experimentation, education and training and testing**. Included in this document also are the technical details relating to the operation, components, drawings, equipment list and control and communication network of SWaT.

Background

Operational since March 2015, SWaT is a key asset for researchers aiming at the design of **safe and secure cyber-physical systems (CPS)**. The testbed consists of a modern six-stage water treatment process that closely mimics a real world treatment plant. Stage 1 of the **physical process** begins by taking in raw water, followed by chemical dosing (Stage 2), filtering it through an Ultrafiltration (UF) system (Stage 3), dechlorination using UV lamps (Stage 4), and then feeding it to a Reverse Osmosis (RO) system (Stage 5). A backwash process (Stage 6) cleans the membranes in UF using the RO permeate.

The **cyber portion** of SWaT consists of a layered communications network, Allen-Bradley Programmable Logic Controllers (PLCs), Human Machine Interfaces (HMIs), Supervisory Control and Data Acquisition (SCADA) workstation, and a Historian. Data from sensors is available to the SCADA system and recorded by the Historian for subsequent analysis.

Research and Experimentation

Notable aspects of the testbeds include segmented communications networks, wired and wireless communications, distributed dynamic control, interconnection among the testbeds, and complete access to the control logic inside the PLCs and HMIs. Access to them allows researchers to develop their own code and upload it in the controllers for research and experimentation. It also allows them to demonstrate their technologies in a **safe, controlled and realistic environment**.

Our **SWaT dataset** consists of 11 days of continuous operation – of which 7 days' worth of data was collected under normal operation while 4 days' worth of data was collected with attack scenarios. During the data collection, all network traffic, sensor and actuator data were collected. The [dataset](#) (available upon request) is highly sought after, with requests from more than 140 researchers from over 30 countries.

Education and Training

SWaT is being used by students from SUTD's Master of Science Security by Design (MSSD) programme as an **education and training platform** to cement and bring to life concepts introduced in the classroom. It is also offered to organisations in training their **operational technology (OT) personnel** in cyber incidents.

Testing

iTrust has organised two international competitions, named [SUTD Security Showdown \(S3\)](#), attracting researchers and engineers from US, Europe, and Asia to attack SWaT and enabling iTrust researchers and companies to **test their technologies** when a testbed is under attack by independent attackers. At the request of our collaborators, iTrust has also been involved in the **proof-of-concept** of defensive technologies installed on SWaT.

PROCESS AND SYSTEM OVERVIEW

Each of the six sub-processes, referred to as P1 through P6, is controlled by a set of dual Allen-Bradley PLCs, a primary and a redundant hot-standby. The operation status of the PLCs is monitored by the SCADA system. These sub-processes are shown in Figures 1 and 2.

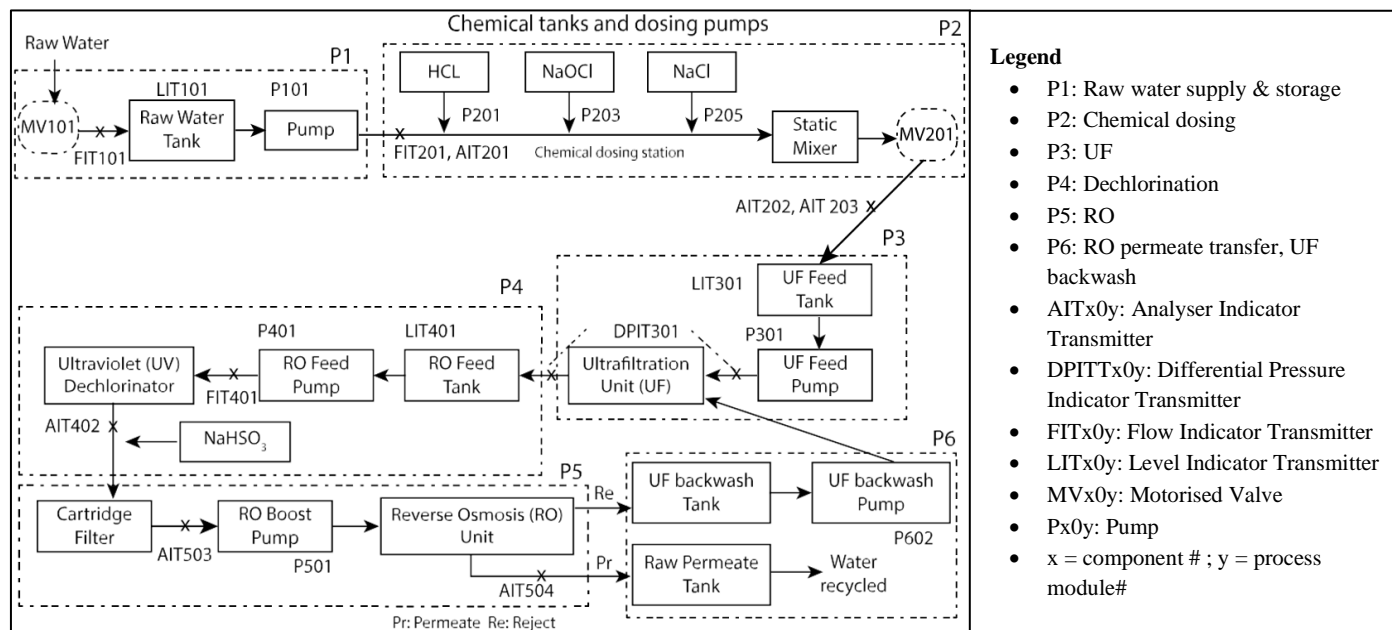


Figure 1: SWaT's six-stage processes

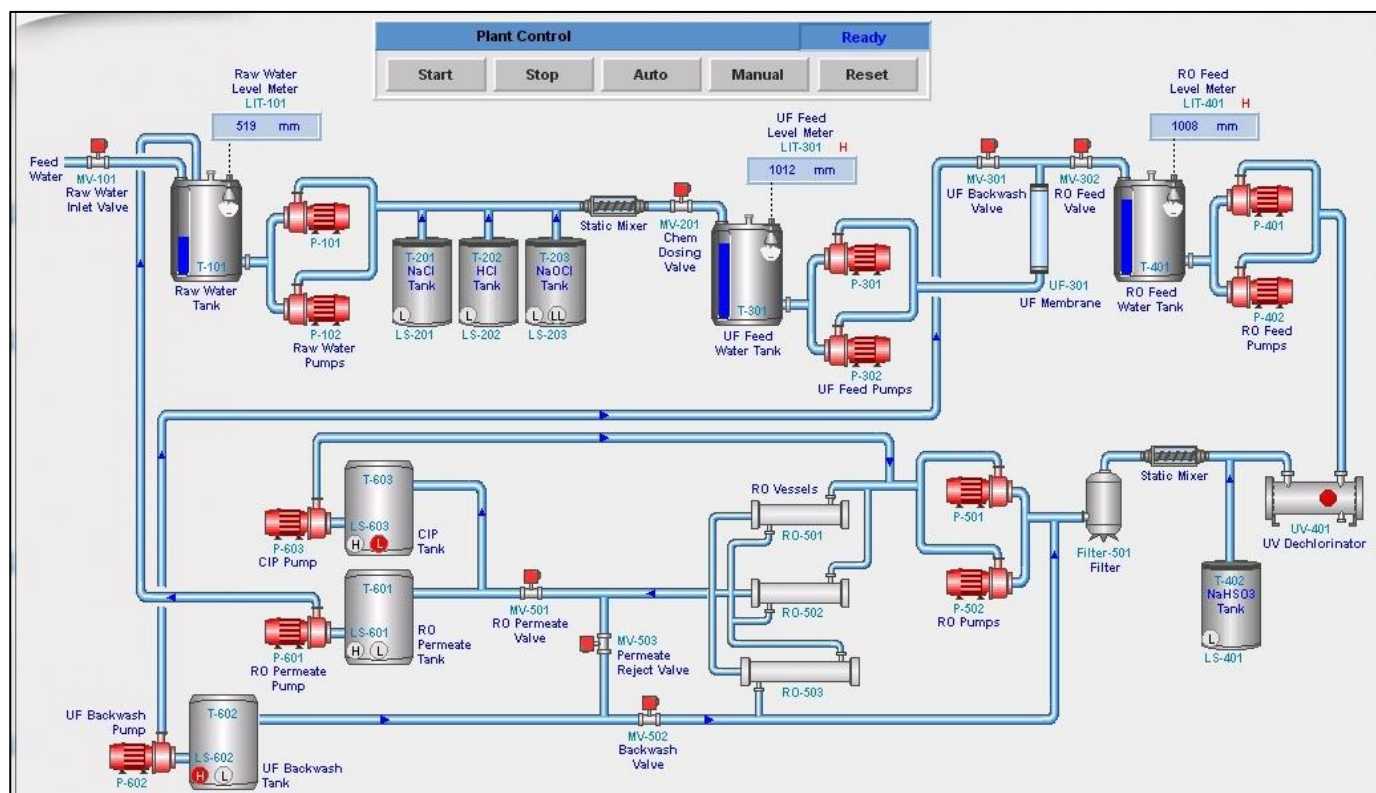


Figure 2: HMI/SCADA screenshot

COMPONENTS (SENSORS AND ACTUATORS)

SWaT consists of an array of monitoring sensors to ensure its safe operations. These are:

- Level Indication Transmitter (measured in mm)
- Flow Indication Transmitter (m^3/hr)
- Analyser Indicator Transmitter
 - Conductivity ($\mu\text{S}/\text{cm}$)
 - pH
 - Oxidation Reduction Potential (mV)
- Differential Pressure Indicator Transmitter (kPa)
- Pressure Indicator Transmitter (kPa)

The sensors and actuators associated with each PLC are shown in Figure 3 below.

Raw Water	Pre-Treatment	Ultra-Filtration	De-Chlorination	Reverse Osmosis	RO Product
P-101 Stopped	P-201 Stopped	P-301 Stopped	P-401 Stopped	P-501 Stopped	P-601 Stopped
P-102 Stopped	P-202 Stopped	P-302 Stopped	P-402 Stopped	P-502 Stopped	P-602 Stopped
MV-101 Closed	P-203 Stopped	MV-301 Closed	P-403 Stopped	MV-501 Closed	P-603 Stopped
LIT-101 520 mm	P-204 Stopped	MV-302 Closed	P-404 Stopped	MV-502 Closed	LS-601 Normal
FIT-101 0.00 m^3/h LL	P-205 Stopped	MV-303 Closed	UV-401 Stopped	MV-503 Closed	LS-602 HIGH
FIT-201 0.00 m^3/h LL	P-206 Stopped	MV-304 Closed	LS-401 Normal	MV-504 Closed	LS-603 LOW
	P-207 Stopped	PSH-301 Normal	LIT-401 1008 mm H	PSL-501 Normal	FIT-601 0.00 m^3/h LL
	P-208 Stopped	DPSH-301 Normal	FIT-401 0.00 m^3/h LL	PSH-501 Normal	
	MV-201 Closed	LIT-301 1012 mm H	AIT-401 0.17 ppm	AIT-501 6.89	
	LS-201 Normal	FIT-301 0.00 m^3/h	AIT-402 275.70 mV	AIT-502 204.20 mV	
	LS-202 Normal	DPIT-301 0.95 kPa LL		AIT-503 264.23 $\mu\text{S}/\text{cm}$ H	
	LS-203 Normal			AIT-504 14.27 $\mu\text{S}/\text{cm}$ H	
	AIT-201 142.18 $\mu\text{S}/\text{cm}$ L			FIT-501 0.00 m^3/h L	
	AIT-202 7.20 H			FIT-502 0.00 m^3/h HH	
	AIT-203 293.59 mV L			FIT-503 0.00 m^3/h HH	
				FIT-504 0.00 m^3/h LL	
				PIT-501 2.64 kPa LL	
				PIT-502 0.00 kPa H	
				PIT-503 0.00 kPa	

Figure 3: Sensors and actuators associated with each PLC

PIPING AND INSTRUMENTATION DIAGRAMS (P&ID)

A piping and instrumentation diagram (P&ID) shows the piping and vessels in the process flow, together with the instrumentation and control devices. This [website](#) explains the common symbols found in P&ID diagrams.

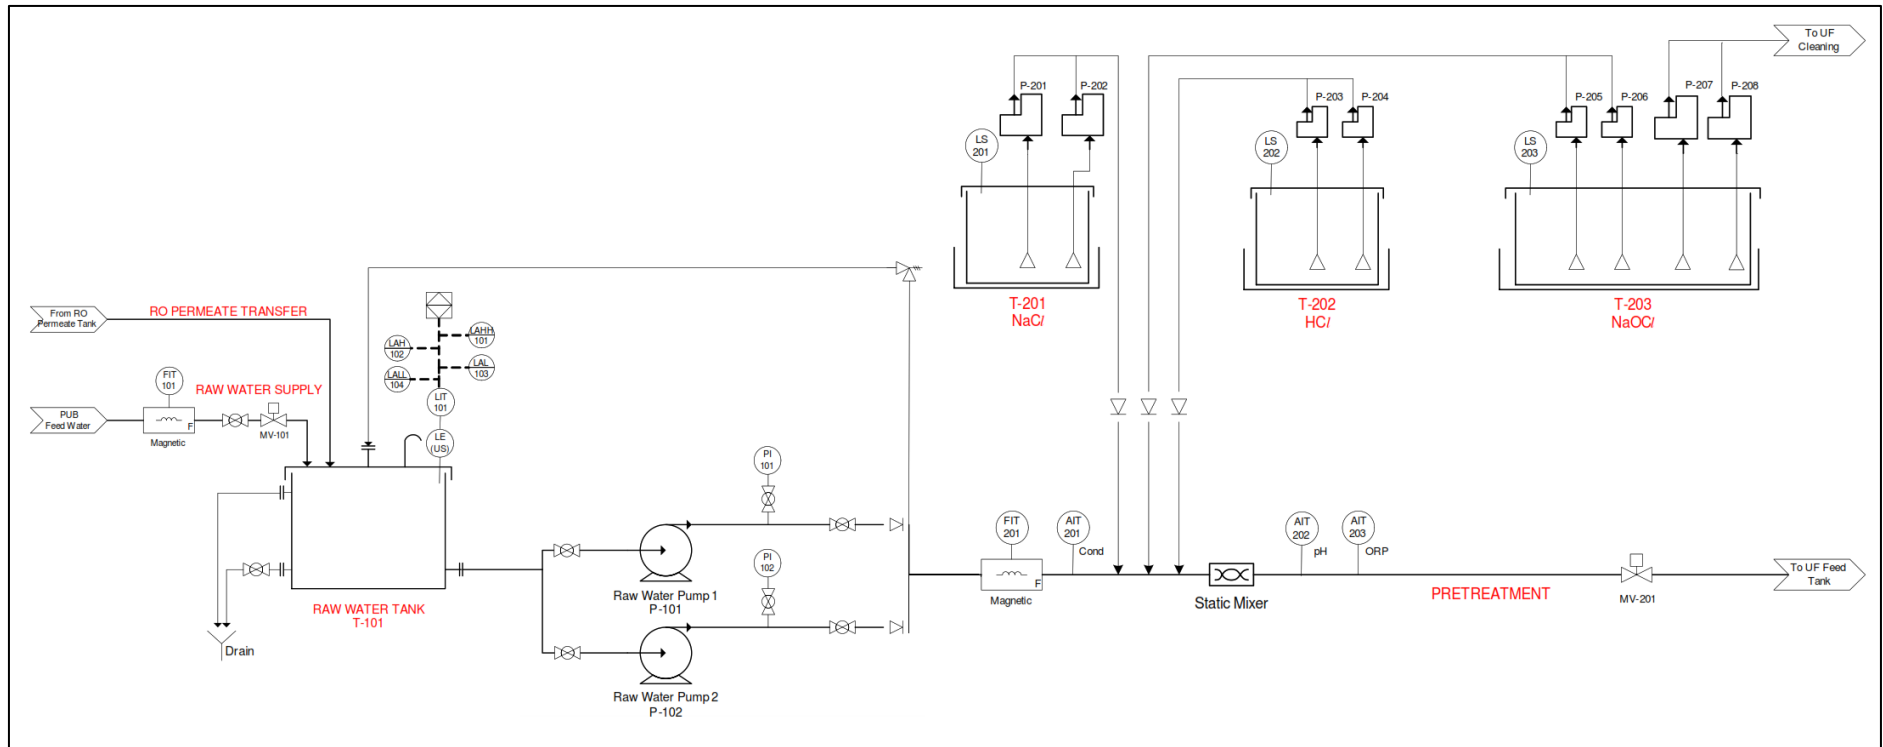


Figure 4: P&ID for P1 (raw water) and P2 (chemical dosing)

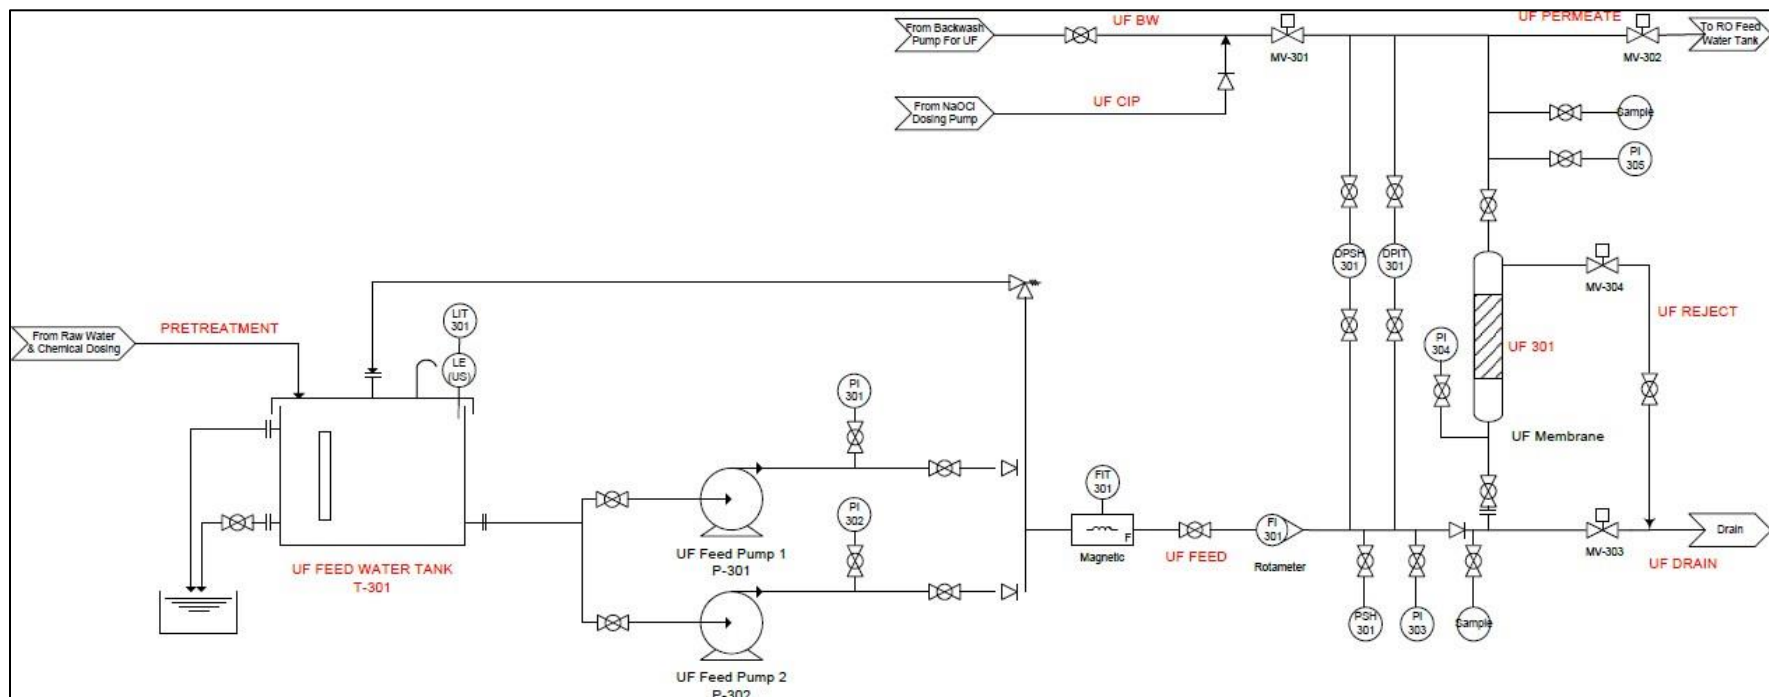


Figure 5: P&ID for P3 (ultrafiltration)

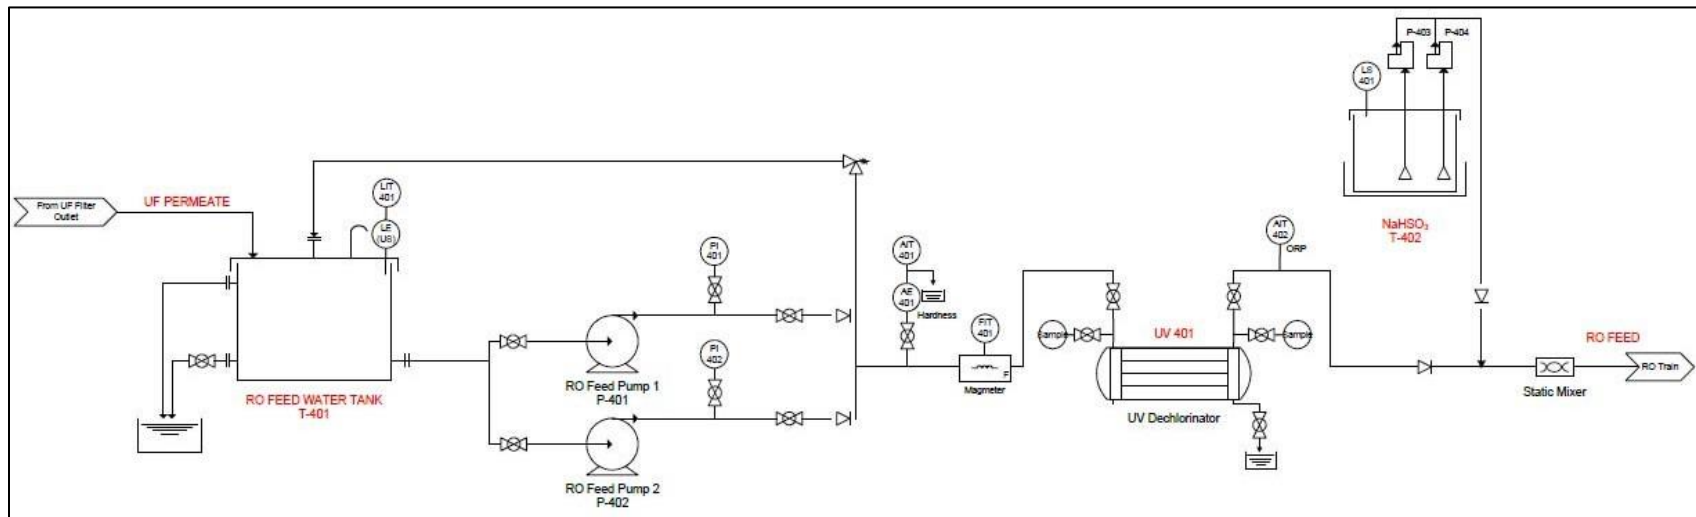


Figure 6: P&ID for P4 (dechlorination)



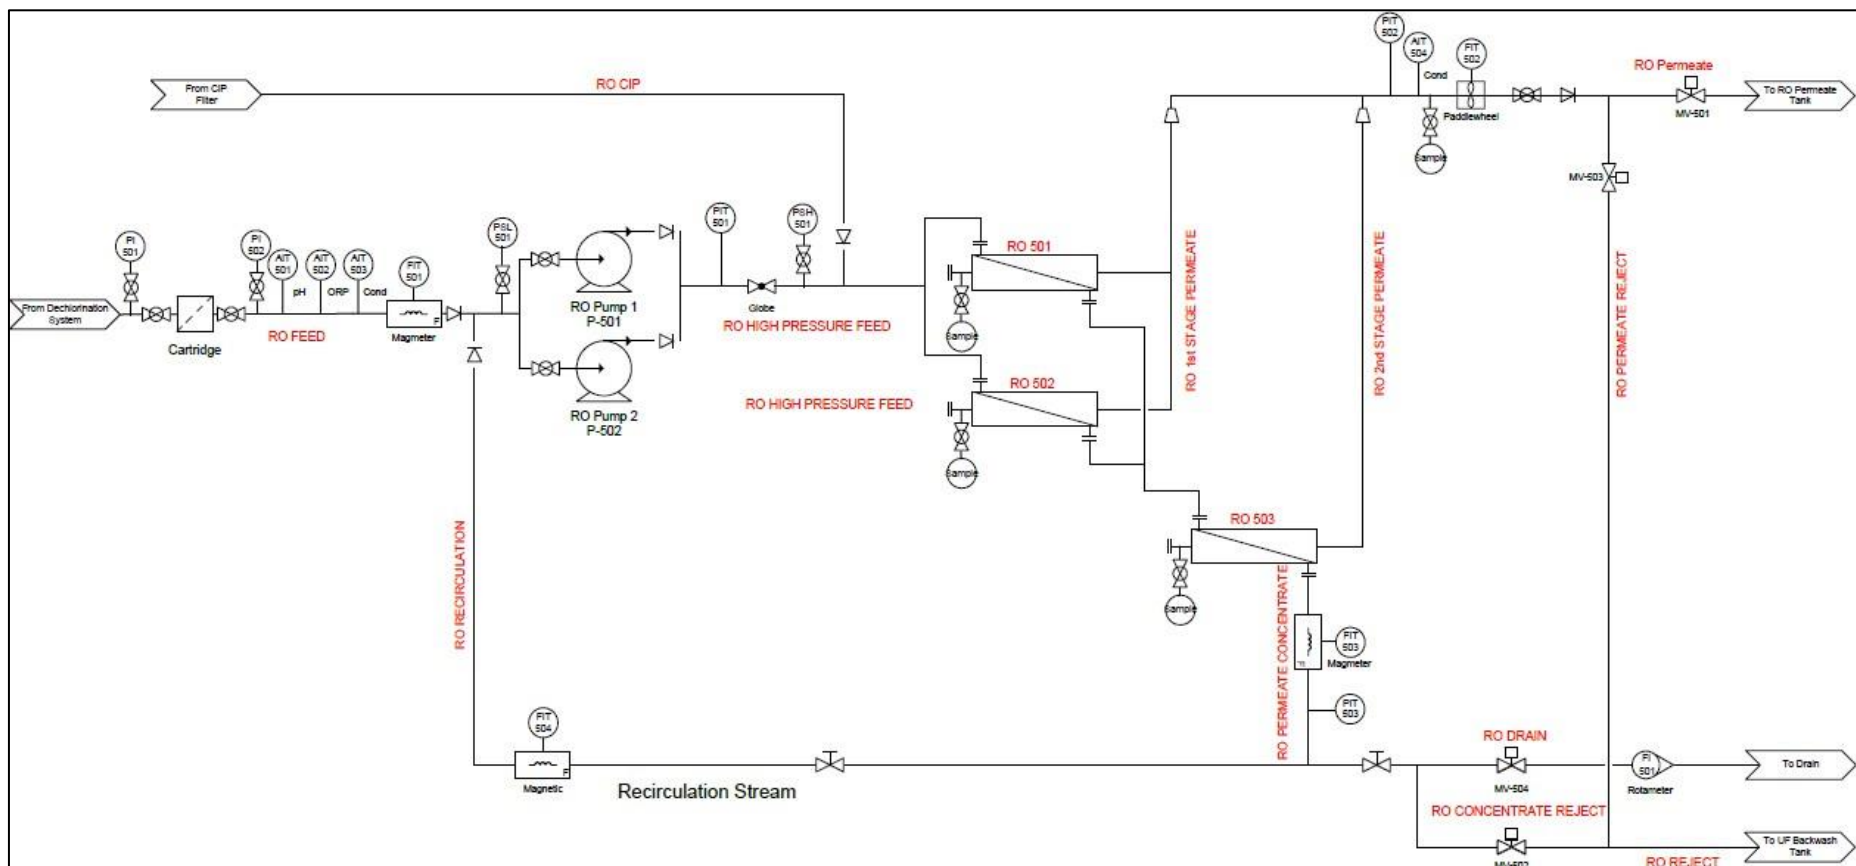


Figure 7: P&ID for P5 (RO)

RO Permeate Tank

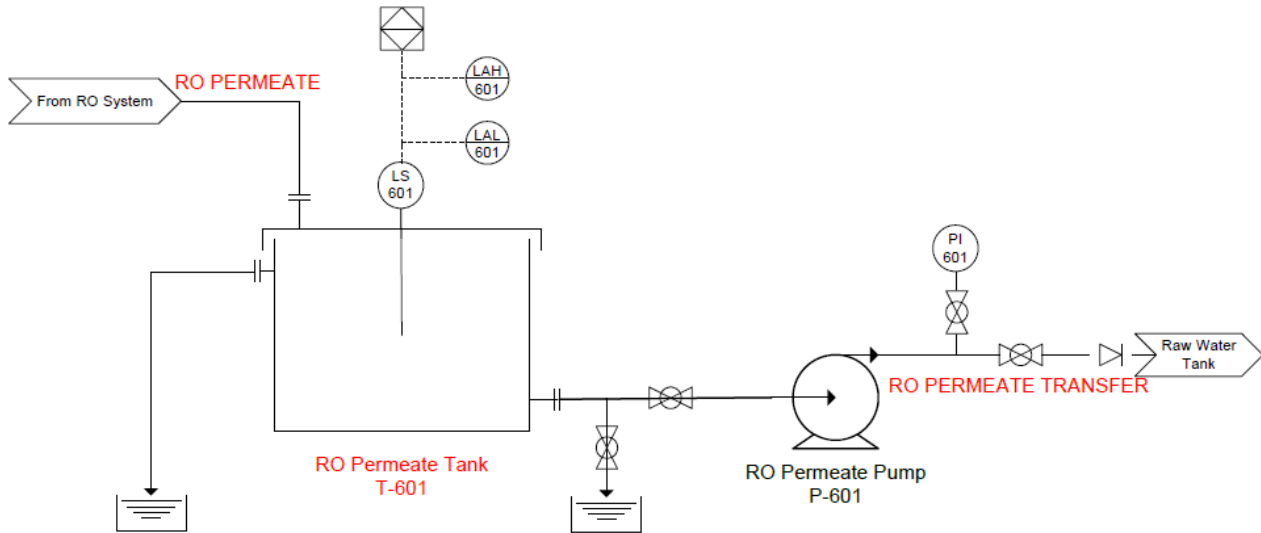

UF Backwash System

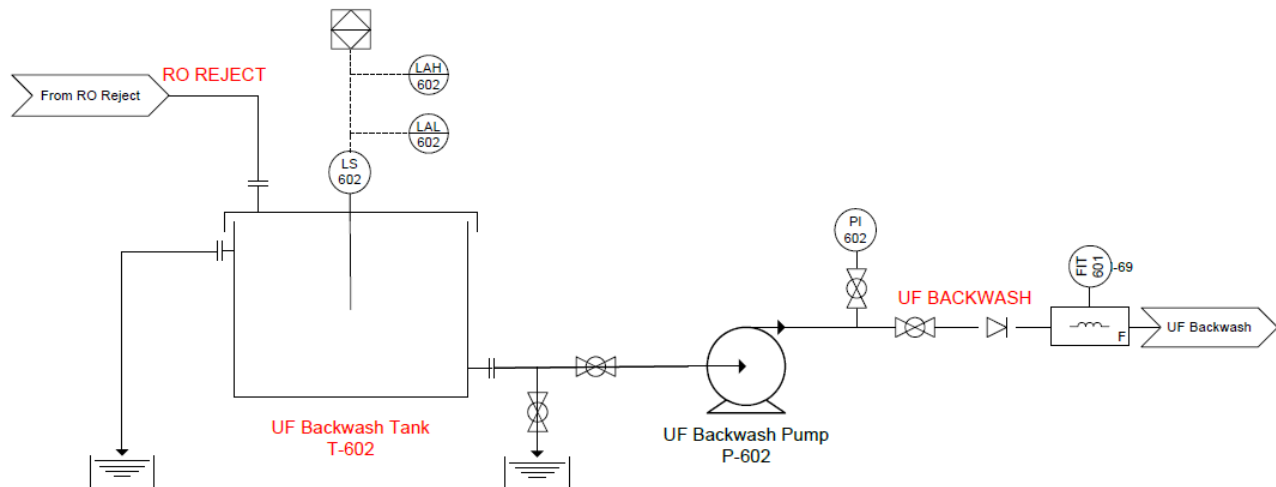

RO/ UF Cleaning System

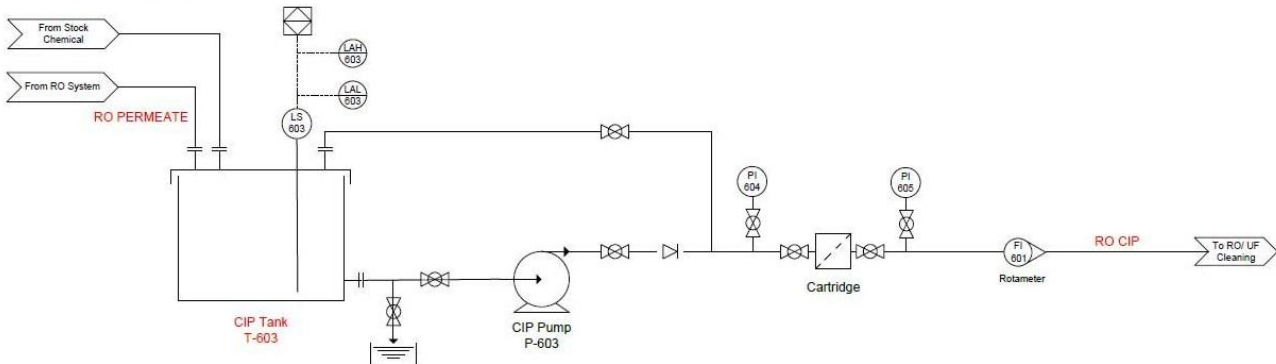


Figure 8: P&ID for (from top) P6_1 (RO Permeate Module), P6_2 (UF Backwash module) and P6_3 (RO/UF Cleaning Module)

EQUIPMENT LIST

Table 1: Equipment list for P1 (raw water)

Description	Design Specification	Material	Qty	Brand & Model	Remarks
Pumps & Tanks					
Raw Water Tank	Capacity: 1.8m³ Dia xH= 1.38 x 1.36	PE	1	Rotamas CPE 1800	T101
Raw Water Transfer Pump	Duty: 2.5 m³/h @ 20m	Casing: Chrome Nickel SS Impeller: Noryl Shaft: SS	2	CALPEDA MXH 203	P101/102
Instrumentation					
Raw Water Tank LIT	Ultrasonic, Range 0.2 to 6m	Non Contact	1	iSOLV LevelWizard II	LIT101
Raw Water FIT	Electromagnetic DN25	PTFE	1	iSOLV EFS803/CFT183	FIT101
Piping & Accessories					
Piping	SCH80	PVC	Lot	Glywed	
Raw Water Inlet On/Off Valve	DN 25, Electric Actuated	PVC	1	Burkert EV2650	MV101
PRV	DN 25	PVC	1	Prominent DHV-DM PVC	

Table 2: Equipment list for P2 (chemical dosing)

Description	Design Specification	Material	Qty	Brand & Model	Remarks
Pumps & Tanks					
NaCl Tank	Capacity: 250l	PE	1	Rotamas CGD 250	
NaCl/Dosing Pump	Capacity : 50 l/h @ 10 bar	Liquid end : PVDF Diaphragm : PTFE faced	2	Prominent Sigma S18a	P201/202
HCl Tank	Capacity: 250l Capacity: 25l (9% HCl)	PE	1	Rotamas CGD 250 25L Carboy	Double Containment
HCl/Dosing Pump	Capacity : 0.78 l/h @ 08 bar	Liquid end : Plexiglas Diaphragm : PTFE faced	2	Prominent GALa1601	P203/204
NaOCl Tank	Capacity: 250l	PE	1	CGD 250	
NaOCl/Dosing Pump (FAC)	Capacity : 0.78 l/h @ 8 bar	Liquid end : Plexiglas Diaphragm : PTFE faced	2	Prominent GALa1601	P205/206
NaOCl/Dosing Pump (UF Cleaning)	Capacity : 65l/h @ 7 bar	Liquid end : PVDF Diaphragm : PTFE faced	2	Prominent Sigma S18a	P207/208
Instrumentation					
Static Mixer	2" NPT M/ 12 elements	PVC	1	Omega	
Raw Water to UF Feed Tank FIT	Electromagnetic DN25	PTFE	1	iSOLV EFS803/CFT183	FIT201
AIT - Conductivity	Up to 1000µS/cm	-	1	Mettler Toledo M200 Single/ easySense Cond 71	AIT201
AIT - pH & ORP	pH: 0-14 ORP: -800mV to 800mV	-	1	Mettler Toledo M200 Dual/ easySense pH 32 & ORP 41	AIT202/203
NaCl Level Switch	Low Alarm	PVC	1	iSOLV LS880	LS201
HCl Level Switch	Low Alarm	PVC	1	iSOLV LS880	LS202
NaOCl Level Switch	Low Alarm	PVC	1	iSOLV LS880	LS203
Piping & Accessories					
Piping	SCH80	PVC	Lot	Glywed	
Raw Water Tank Outlet On/Off Valve	DN 25, Electric Actuated	PVC	1	Burkert EV2650	MV201

Table 3: Equipment list for P3 (ultrafiltration)

Description	Design Specification	Material	Qty	Brand & Model	Remarks
UF Membranes					
UF Membranes	2.5 m³/h	PVDF	1	TORAY HFU-2020	
Pumps & Tanks					
UF Feedwater Tank	Capacity: 1.8m³ Dia xH= 1.38 x 1.36	PE	1	Rotamas CPE 1800	T301
UF Feedwater Pump	Duty: 2.5 m³/h @ 20m	Casing: Chrome Nickel SS Impeller: Noryl Shaft: SS	2	CALPEDA MXH 203	P301/302
Instrumentation					
UF Feed Water Tank LIT	Ultrasonic, Range 0.2 to 6m	Non Contact	1	iSOLV LevelWizard II	LIT301
UF Feed Water FIT	Electromagnetic DN25	PTFE	1	iSOLV EFS803/CFT183	FIT301
UF Feed Water FI	Rotameter, 1"	PVC	1	FSIV Flowmeter	FI301
Pressure Switch	Switch High/ 0-7 Bar Adjustable	SS316 Port	1	CCS 604GZ	PSH301
Differential Pressure Switch	Switch High/ 0-1 Bar	SS316 Port	1	CCS 604DZ	DPSH301
Differential Pressure Indicating Transmitter	Range: 0-2 Bar	SS316 Port	1	SPT 100 DP	DPIT301
Piping & Accessories					
Piping & Manual Valves	SCH80	PVC	Lot	Glywed	
PRV	DN 25	PVC	1	Prominent DHV-DM PVC	
Backwash On/Off Valve	DN 25, Electric Actuated	PVC	4	Burkert EV2650	MV301/2/3/4

Table 4: Equipment list for P4 (dechlorination)

Description	Design Specification	Material	Qty	Brand & Model	Remarks
Pumps & Tanks					
RO Feedwater Tank	Capacity: 1.8m³ Dia xH= 1.38 x 1.36	PE	1	Rotamas CPE 1800	T401
RO Feedwater Pump	Duty: 2.5 m³/h @ 20m	Casing: Chrome Nickel SS Impeller: Noryl Shaft: SS	2	CALPEDA MXH 203	P401/402
NaHSO ₃ Tank	Capacity: 250l Capacity: 25l (10% NaHSO ₃)	PE	1	Rotamas CGD 250 25L Carboy	Double Containment
NaHSO ₃ Dosing Pump	Capacity : 0.78 l/h @ 8 bar	Liquid end : Plexiglas Diaphragm : PTFE faced	2	Prominent GALA1601	P403/404
UV Chlorine Destruction Unit					
UV Unit	Removal up to 0.5ppm 2.3m³/h	SS316	1	Aquafine Optima 200	UV401
Instrumentation					
RO Feed Water Tank LIT	Ultrasonic, Range 0.2 to 6m	Non Contact	1	iSOLV LevelWizard II	LIT401
Hardness Monitor	Range: 0-10ppm	-	1	HACH APA 6000	AIT401
AIT –ORP	ORP: -800mV to 800mV	-	1	Mettler Toledo M200 Singlel/ easySense ORP 41	AIT402
RO Feed FIT	Electromagnetic DN25	PTFE	1	iSOLV EFS803/CFT183	FIT401

Table 5: Equipment list for P5 (RO)

Description	Design Specification	Material	Qty	Brand & Model	Remarks	Description	Design Specification	Material	Qty	Brand & Model	Remarks
RO Membranes						AIT – pH & ORP (RO Feed)	pH: 0-14 ORP: -800mV to 800mV	-	1	Mettler Toledo M200 Dual/ easySense pH 32 & ORP 41	AIT501 / 502
Pre RO Cartridge Filter	Heavy Duty Multi-Cartridge Housing Max Pressure: 125PSI Number of Cartridges & Size: (4) 10" Flowrate: 28 GPM Element: 1 Micron	SS304 Housing	1	Graver 4MC1-VB-316L-1.5N-8		Pressure Switch (Before High Pressure RO Pump)	Low Alarm, 0-10 Bar (Adjustable)	SS316 Port	1	CCS 604GZ	PSL501
RO Membrane	As Per Design Considerations	-	3+3 4	Toray TMH10A		Pressure Switch (After High Pressure RO Pump)	High Alarm, 0-10 Bar (Adjustable)	SS316 Port	1	CCS 604GZ	PSH501
RO Vessel	-	Shell: Epoxy/Glass Composites	3	Pentair Codeline40S30		PIT (After High Pressure RO Pump)	0-10 Bar	SS316 Port	1	iSOLV SPT 100	PIT501
Pumps						PIT (RO Concentrate)	0-10 Bar	SS316 Port	1	iSOLV SPT 100	PIT503
High Pressure RO Pump With VSD	Duty: 2m³/h @ 5bar	Casing: Chrome Nickel SS Impeller: Noryl Shaft: SS	2	CALPEDA MXH206	P501/5	PIT (RO Permeate)	0-10 Bar	SS316 Port	1	iSOLV SPT 100	PIT502
Instrumentation						FIT (RO Concentrate)	Electromagnetic DN25	PTFE	1	iSOLV EFS803/CFT183	FIT503
AIT – Conductivity (RO Feed)	Up to 1000µS/cm	-	1	Mettler Toledo M200 Dual/ easySense Cond 71	AIT503	FIT (RO Recirculation)	Electromagnetic DN25	PTFE	1	iSOLV EFS803/CFT183	FIT504
AIT – Conductivity (RO Permeate)	Range: 0.02 to 20 µS/cm	-	1	easySense Cond 71	AIT504						

Table 6: Equipment list for P6 (RO permeate transfer, UF backwash)

Description	Design Specification	Material	Qty	Brand & Model	Remarks	Description	Design Specification	Material	Qty	Brand & Model	Remarks
Pumps & Tanks						Cartridge Filter					
RO Permeate Tank	Capacity: 1.2m³ DiaxH = 1.16 x 1.24	PE	1	Rotamas CPE 1200	T601	Pre RO Cartridge Filter	Heavy Duty Multi-Cartridge Housing Max Pressure: 125PSI Number of Cartridges &Size: (4) 10" Flowrate: 28 GPM Element: 1 Micron	SS304 Housing	1	Graver 4MC1-VB-316L-1.5N-8	
RO Permeate Transfer Pump	Duty: 2.5 m³/h @ 20m	Casing: Chrome Nickel SS Impeller: Noryl Shaft: SS	1	CALPEDA MXP 203	P601						
Instrumentation											
UF Backwash Tank	Capacity: 1.2m³ DiaxH = 1.16 x 1.24	PE	1	Rotamas CPE 1200	T602	RO Permeate Tank Level Switch	Low & High Alarm	PVC	1	iSOLV LS880	LS601
UF Backwash Tank Pump	Duty: 2.5 m³/h @ 20m	Casing: Chrome Nickel SS Impeller: Noryl Shaft: SS	1	CALPEDA MXP 203	P602	UF Backwash Tank Level Switch	Low & High Alarm	PVC	1	iSOLV LS880	LS602
CIP Tank (UF/RO)	Capacity: 550l	PE	1	CGD 550		CIP Tank Level Switch	Low & High Alarm	PVC	1	iSOLV LS880	LS603
CIP Pump	Duty: 2.5 m³/h @ 20m	Casing: Chrome Nickel SS Impeller: Noryl Shaft: SS	1	CALPEDA MXP 203	P603	FIT (UF Backwash)	Electromagnetic DN25	PTFE	1	iSOLV EFS800/CFT180	FIT601
						FI (RO/UF Cleaning)	Rotameter, 1"	PVC	1	FSIV Flowmeter	FI601/2

CONTROL AND COMMUNICATION NETWORK

The network architecture for SWaT complies with the [Industrial Automation and Control Systems Security- ISA99](#), a security standard for industrial automation and control systems. This standard suggests a core concept which is “Zone and Conduits” and “Layer”. It offers a level of segmentation and traffic control inside the Control and Communication Network, and is designed to support both wired and wireless network communication.

Layers

- Layer 3.5 – Demilitarised Zone (DMZ)
- Layer 3 – Operation Management (Historian)
- Layer 2 – Supervisory Control (Touch Panel, Engineering Workstation, HMI Control Clients)
- Layer 1 – Plant Control Network (PLCs) (Star Network)
- Layer 0 – Process (Actuator/Sensors and Input/output modules) (Ring Network)

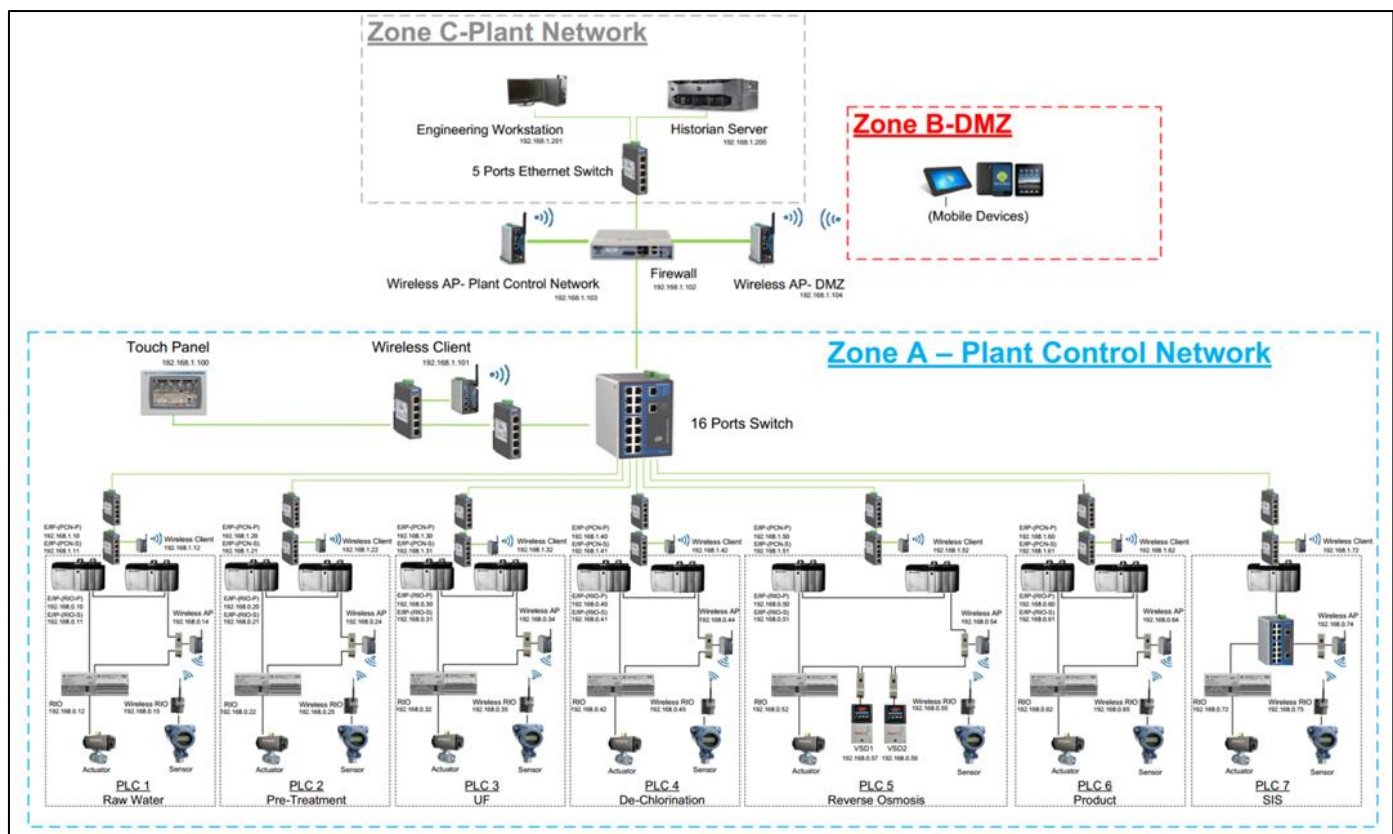


Figure 9: SWaT network architecture (PLC7 is for training/testing)

Network Protocol

All network communication by PLCs, sensors and actuators in SWaT is using the industrial EtherNet/IP and Common Industrial Protocol (CIP) stack. Specifically:

- 1) CIP¹ over EtherNet/IP (Network level 1)
- 2) EtherNet/IP (Network level 0 i.e. between PLC and remote I/O)

Network Monitoring and Decoding

Researchers perform network traffic monitoring and decoding, using tools such as Wireshark (monitoring/listening), Scapy (decoding, Ethernet/IP reverse-engineering) and Ettercap (network sniffing, MITM attacks). Examples of these processes are shown below.

Almost every second, there will be packets coming from HMI to PLC1 which look like this eg: hex-offset hex-packet (read from top-left to right-bottom)::

```
0000 80 1d 9c c8 bd e7 00 1d 9c c6 72 e8 08 00 45 00
0010 00 5e 2f 95 40 00 80 06 47 46 c0 a8 01 64 c0 a8
0020 01 0a c2 03 af 12 8e 7a 43 87 01 bd 1e 5e 50 18
0030 82 9c 2a 07 00 00 70 00 1e 00 02 00 16 00 00 00
0040 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
0050 00 00 00 00 02 00 a1 00 04 00 20 42 b5 ff b1 00
0060 0a 00 8a 07 4c 03 20 b2 25 00 22 00
```

and right after, a response from PLC1 to HMI::

```
0000 80 1d 9c c6 72 e8 00 1d 9c c8 bd e7 08 00 45 00
0010 00 b8 12 13 40 00 40 06 a4 6e c0 a8 01 0a c0 a8
0020 01 64 af 12 c2 03 01 bd 1e 5e 8e 7a 43 bd 50 18
0030 20 00 e8 5f 00 00 70 00 78 00 02 00 16 00 00 00
0040 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
0050 00 00 00 00 02 00 a1 00 04 00 9d 36 00 80 b1 00
0060 64 00 8a 07 cc 00 00 00 01 00 00 00 00 00 eb 14
0070 d3 43 01 00 01 00 01 00 02 00 0c 00 00 00 40 40
0080 00 00 80 40 00 00 80 3f 00 00 00 3f 24 00 00 48
0090 44 00 80 89 44 00 00 2f 44 00 00 7a 43 13 01 00
00a0 0b 01 00 01 0b 01 00 01 00 01 00 00 00 00 03 00
00b0 00 04 00 01 00 01 05 00 eb 14 d3 43 06 00 00 00
00c0 00 00 52 66 14 42
```

Once decoded with scapy, these packets become::

```
###[ Ethernet ]###
dst      = 00:1d:9c:c8:bd:e7
src      = 00:1d:9c:c6:72:e8
type     = 0x800
###[ IP ]###
version  = 4L
ihl      = 5L
tos      = 0x0
len      = 94
id       = 12181
flags    = DF
frag     = 0L
ttl      = 128
proto    = tcp
chksum   = 0x4746
src      = 192.168.1.100
dst      = 192.168.1.10
\options
###[ TCP ]###
sport    = 49667
dport    = EtherNet_IP_2
seq      = 2390377351
ack      = 29171294
dataofs  = 5L
reserved = 0L
flags    = PA
window   = 33436
chksum   = 0x2a07
urgptr   = 0
options  = []
```

¹ The [Common Industrial Protocol \(CIP\) and the Family of CIP Networks](#) gives a comprehensive look at how CIP and its network implementations are designed. The guide is a great starting point for those who are new to CIP Networks.

```

###[ ENIP_TCP ]###
command_id= SendUnitData
length = 30
session = 1441794
status = success
sender_context= 0
options = 0
###[ ENIP_SendUnitData ]###
interface_handle= 0
timeout = 0
count = 2
\items
  ###[ ENIP_SendUnitData_Item ]###
  type_id = conn_address
  length = 4
  ###[ ENIP_SendUnitData_Item ]###
  type_id = conn_packet
  length = 100
  ###[ ENIP_ConnectionPacket ]###
  sequence = 1930
  ###[ CIP ]###
  direction = response
  service = Read_Tag_Service
  \path
  \status
  ###[ CIP_ResponseStatus ]###
  reserved = 0x0
  status = success
  additional_size= 0x0
  additional= ''
  ###[ Raw ]###
  load = '\x01\x00\x00 [[ SNIPPED ]] \x14B'

```

Therefore:

- * HMI is requesting to read tag ``class 0xb2,instance 0x22`` on PLC1. In this request, the class ID never change but the instance ID may change.
- * PLC1 is responding with a successful status and a binary blob of data. This data is the concatenation of several tags, and it is only needed to find the offset where the water level is reported to be able to modify it (there is no authentication nor integrity check of the result).

Figure 10: Sample network packet monitoring and decoding using Wireshark and Scapy respectively

As ettercap works from the TCP payload, here is this payload from another network capture, with some important values::

```

0000 70 00 ----- ENIP Send Unit Data command
02    65 00 02 00 25 00 00 00 00 00 00 00 00 00
0010 00 00 00 00 00 00 00 00 00 00 00 00 00 00
1e    02 00 - ENIP item count
0020 a1 00 ----- ENIP first item: Connected Address Item
22    04 00 ----- length = 4 bytes
24    db e8 00 80
28    b1 00 ----- ENIP second item: Connected Data Item
2a    51 00 ----- Size of CIP packet: 81 bytes (= 0x51)
2c    78 ed
2e    cc 00 - CIP response to Read Tag Service
0030 00 00 ----- CIP response status: OK
32    01 00 00 00 00 00
38    c5 8e 6d 44 ----- water level (LIT101 tag): 0x446d8ec5 = 950.23
3c    01 00 ----- Motored Valve MV101 off (on is "02 00")
3e    02 00 - Pump P101 state: open
0040 01 00 ----- Pump P102 state: closed
42    02 00 0c 00 00 00 40 40 00 00 80 40 00 00
0050 80 3f 00 00 00 3f 22 00 00 48 44 00 80 89 44 00
0060 00 fa 43 00 00 7a 43 13 01 00 0b 02 00 01 0b 01
0070 00 01 01 01 00 00 00 00 03 00 02 00 01

```

The water level is encoded in little-endian single-precision floating-point format (IEEE 754, https://en.wikipedia.org/wiki/Single-precision_floating-point_format), so bytes ``c5 8e 6d 44`` can be decoded in a simple Python program::

```

program::
=====
import binascii, struct
print(struct.unpack('<f', binascii.unhexlify('c58e6d44'))[0])

```

which displays ``950.2307739257812``.

To find the offset of this value, it is possible to quickly scroll in wireshark the CIP payloads of packets matching the filter ``cip.service == 0xcc && cip.class == 0xb2``, and two bytes would keep changing a lot between packets, which would be the first bytes of ``c5 8e 6d 44`` here, as they encode a part of the fraction part of the float number linked to a real sensor.

once the offset is found, it is possible to modify the bytes in an ettercap filter, as it is done in ``mitm-b2cls_rdttag.ecf``. For example value 420 is encoded in bytes ``00 00 d2 43`` so this etterfilter code modifies the water level to 420::

Figure 11: Sample process of modifying bytes in an Ettercap filter to modify tag values

IP ADDRESS

The IP addresses of the seven PLCs and SCADA in SWaT are shown below.

P1 - Raw Water		P2 - Pre-Treatment	
Device	IP Address	Device	IP Address
E/IP (PCN) - Primary	192.168.1.10	E/IP (PCN) - Primary	192.168.1.20
E/IP (PCN) - Secondary	192.168.1.11	E/IP (PCN) - Secondary	192.168.1.21
Wireless Client (PCN)	192.168.1.12	Wireless Client (PCN)	192.168.1.22
E/IP (RIO) - Primary	192.168.0.10	E/IP (RIO) - Primary	192.168.0.20
E/IP (RIO) - Secondary	192.168.0.11	E/IP (RIO) - Secondary	192.168.0.21
RIO Adaptor	192.168.0.12	RIO Adaptor	192.168.0.22
RIO Access Point	192.168.0.14	RIO Access Point	192.168.0.24
Wireless Adaptor	192.168.0.15	Wireless Adaptor	192.168.0.25

P3 - Ultra-Filtration		P4 - De-Chlorination	
Device	IP Address	Device	IP Address
E/IP (PCN) - Primary	192.168.1.30	E/IP (PCN) - Primary	192.168.1.40
E/IP (PCN) - Secondary	192.168.1.31	E/IP (PCN) - Secondary	192.168.1.41
Wireless Client (PCN)	192.168.1.32	Wireless Client (PCN)	192.168.1.42
E/IP (RIO) - Primary	192.168.0.30	E/IP (RIO) - Primary	192.168.0.40
E/IP (RIO) - Secondary	192.168.0.31	E/IP (RIO) - Secondary	192.168.0.41
RIO Adaptor	192.168.0.32	RIO Adaptor	192.168.0.42
RIO Access Point	192.168.0.34	RIO Access Point	192.168.0.44
Wireless Adaptor	192.168.0.35	Wireless Adaptor	192.168.0.45

P5 - Reverse Osmosis		P6 - RO Product	
Device	IP Address	Device	IP Address
E/IP (PCN) - Primary	192.168.1.50	E/IP (PCN) - Primary	192.168.1.60
E/IP (PCN) - Secondary	192.168.1.51	E/IP (PCN) - Secondary	192.168.1.61
Wireless Client (PCN)	192.168.1.52	Wireless Client (PCN)	192.168.1.62
E/IP (RIO) - Primary	192.168.0.50	E/IP (RIO) - Primary	192.168.0.60
E/IP (RIO) - Secondary	192.168.0.51	E/IP (RIO) - Secondary	192.168.0.61
RIO Adaptor	192.168.0.52	RIO Adaptor	192.168.0.62
RIO Access Point	192.168.0.54	RIO Access Point	192.168.0.64
Wireless Adaptor	192.168.0.55	Wireless Adaptor	192.168.0.65
ETAP (VSD 1)	192.168.0.56		
VSD 1	192.168.0.57		
ETAP (VSD 2)	192.168.0.58		
VSD 2	192.168.0.59		

P7 - SIS		SCADA System	
Device	IP Address	Device	IP Address
E/IP (PCN) - Primary	192.168.1.70	E/IP (PCN) - Primary	192.168.1.100
Wireless Client (PCN)	192.168.1.72	Wireless Client	192.168.1.101
E/IP (RIO) - Primary	192.168.0.70		
RIO Adaptor	192.168.0.72	Firewall	192.168.1.102
RIO Access Point	192.168.0.74	PCN Access Point	192.168.1.103
Wireless Adaptor	192.168.0.75	DMZ Access Point	192.168.1.104
		Historian Server	192.168.1.200
		Engineering Workstation	192.168.1.201

